

Model H-800 Hang


Installation and Maintenance Instructions

Questions? Call 800-657-2650 for help

For ALL installations:

- Display or sign load MUST be balanced.
- Do NOT exceed rated capacity of unit.

Display or Sign hanging from Rotator:

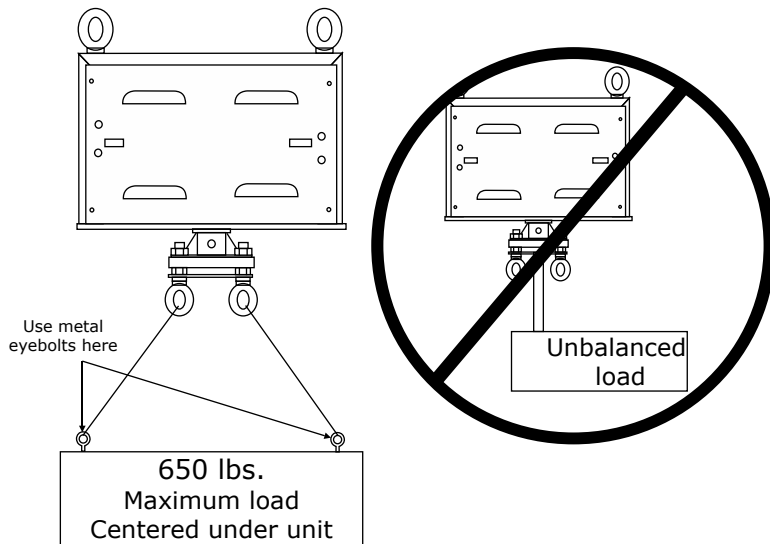

- Max hanging weight = 650 lbs
- Eyebolts can be added for rigging.
- Hanging load MUST be balanced and centered under unit.
- Use wire rope to allow hanging sign to self-balance.
- Do NOT allow bare wire rope to rub on eyebolts.
- Wire rope should be protected to prevent fraying or failure.

Maintenance:



No regular maintenance is required for this unit.




Phone: 800-657-2650
Email: info@dynapacrotating.com
www.dynapacrotating.com

Model H-800 Hang Electrical Connections

Questions? Call 800-657-2650 for help


⚠ WARNING	
	Disconnect power before servicing or installing. Do not touch any electrical components while unit is connected to power source.
	Keep hands clear while operating. Read installation and maintenance instructions prior to operation.

Unit with rotating wires/outlet:

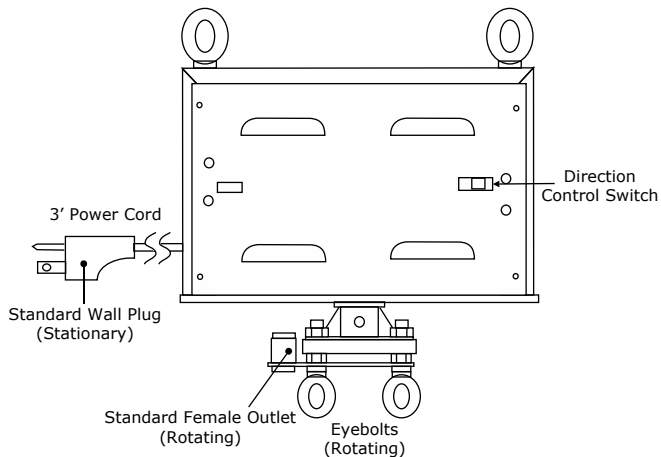

- **WARNING!** Electrical components are live when unit is plugged in.
- Do NOT exceed rated electrical capacity of unit (see label on unit).
- Plug sign wiring into outlet on turntable.
- Plug unit into wall.
- Press direction switch to start unit.
- Motor power draw = 0.46 A (50 watts)

Unit without rotating wires/outlet:

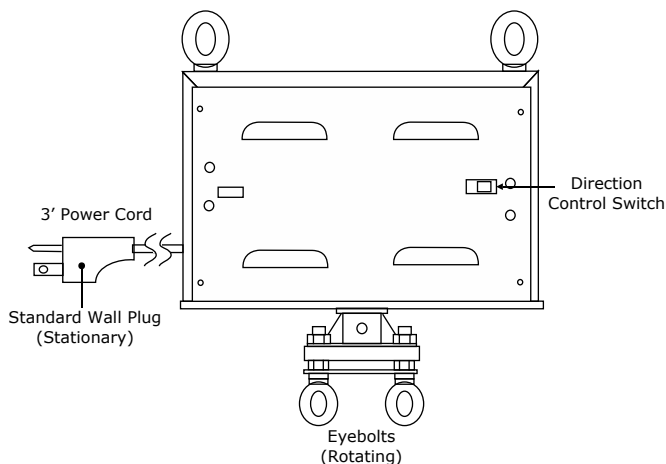

- No rotating electrical wires are available.
- Plug unit into wall.
- Press direction switch to start unit.
- Motor power draw = 0.46 A (50 watts)

