

Model IG-2 Hang

 
Installation and Maintenance Instructions

Questions? Call 800-657-2650 for help

For ALL installations:

- Display or sign load MUST be balanced.
- Do NOT exceed rated capacity of unit.

Display or Sign hanging from Rotator:

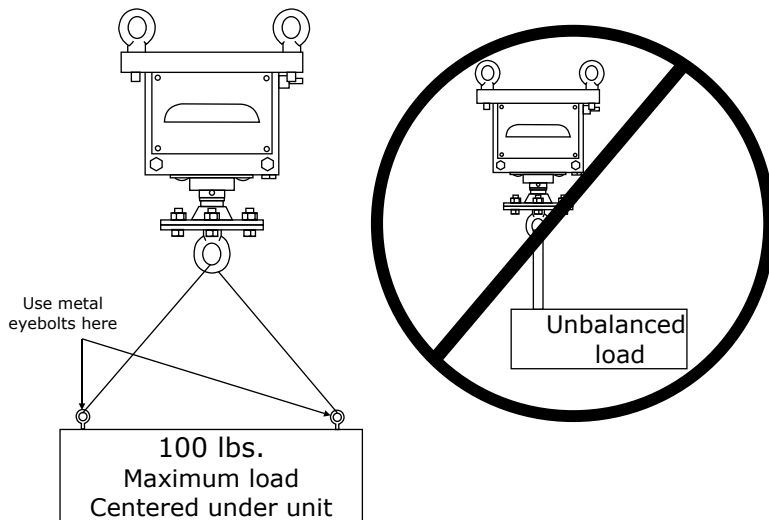

- Max hanging weight = 100 lbs
- Eyebolts can be added for rigging.
- Hanging load MUST be balanced and centered under unit.
- Use wire rope to allow hanging sign to self-balance.
- Do NOT allow bare wire rope to rub on eyebolt.
- Wire rope should be protected to prevent fraying or failure.

Maintenance:

No regular maintenance is required for this unit.





Phone: 800-657-2650
Email: info@dynapacrotating.com
www.dynapacrotating.com


Model IG-2 Hang

Electrical Connections

Questions? Call 800-657-2650 for help


| ⚠ WARNING | |
|---|--|
|  | Disconnect power before servicing or installing. Do not touch any electrical components while unit is connected to power source. |
|  | Keep hands clear while operating. Read installation and maintenance instructions prior to operation. |

 Unit with rotating wires/outlet:

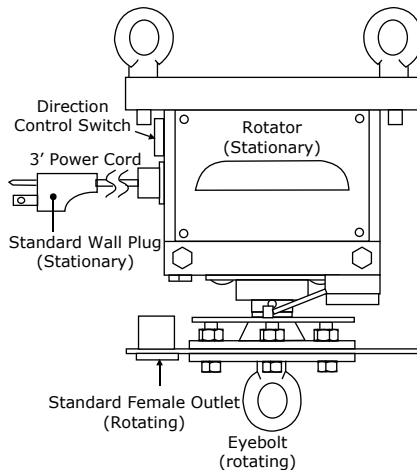

- **WARNING!** Electrical components are live when unit is plugged in.
- Do NOT exceed rated electrical capacity of unit (see label on unit).
- Plug sign wiring into outlet on turntable.
- Plug unit into wall.
- Press direction switch to start unit.
- Motor power draw = 0.1 A (12 watts)

 Unit without rotating wires/outlet:

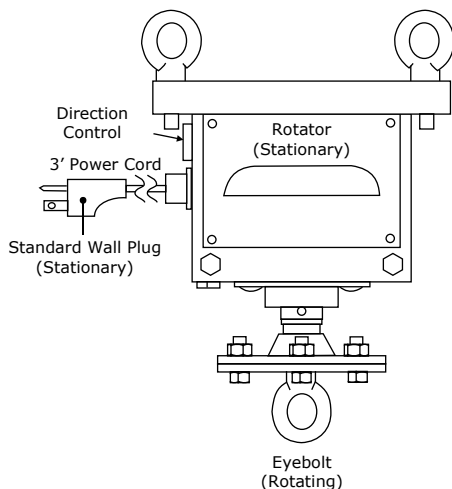

- No rotating electrical wires are available.
- Plug unit into wall.
- Press direction switch to start unit.
- Motor power draw = 0.1 A (12 watts)

