
Model IR-20 and M-10 Hang Installation and Maintenance Instructions

Questions? Call 800-657-2650 for help


For ALL installations:

- Display or sign load MUST be balanced.
- Do NOT use stabilizer casters or wheels.
- Do NOT exceed rated capacity of unit.

Choose installation method below:

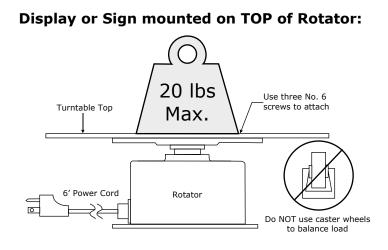

Display or Sign hanging from Rotator:

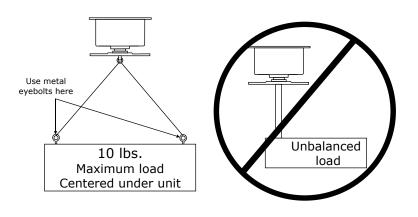

- Maximum compressive weight = 20 lbs.
- Maximum recommended display size = 2' x 2'
- Rotator must be placed on a flat and level surface.
- Larger diameter turntable top may be attached to rotator turntable.
- Weight MUST be balanced (add a counter weight if needed).
- Do NOT use caster wheels to support turntable.
- Max hanging weight = 10 lbs
- Eyebolts can be added for rigging.
- Hanging load MUST be balanced and centered under unit.
- Use wire rope to allow hanging sign to self-balance.
- Do NOT exceed weight rating of rotator (10 lbs. Maximum).
- Do NOT allow bare wire rope to rub on hook.
- Wire rope should be protected by an eyebolt to prevent fraying or failure.

Maintenance:

No regular maintenance is required for this unit.




Phone: 800-657-2650 Email: info@dynapacrotating.com www.dynapacrotating.com


Model IR-20 and M-10 Hang

Electrical Connections


Questions? Call 800-657-2650 for help

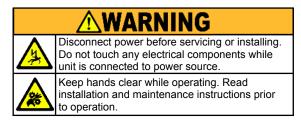

Unit with rotating wires:

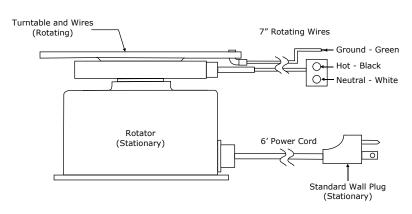

Unit without rotating wires:

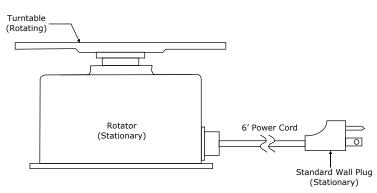

- WARNING! Electrical components are live when unit is plugged in.
- Do NOT exceed rated electrical capacity of unit. (10 Amps, 1100 watts)
- Attach display wires to rotating turntable wires.
- Plug unit into wall to begin rotating.
- Motor power draw =.02 A (2.3 watts)
- No power switch on unit.
- No rotating electrical wires are available.
- Plug unit into wall to begin rotating.
- Motor power draw =.02 A (2.3 watts)
- No power switch on unit.

