

Model IR-300


Installation and Maintenance Instructions

Questions? Call 800-657-2650 for help

For ALL installations:

- Display or sign load MUST be balanced.
- Do NOT use stabilizer casters or wheels.
- Do NOT exceed rated capacity of unit.

Display or Sign mounted on TOP of Rotator:

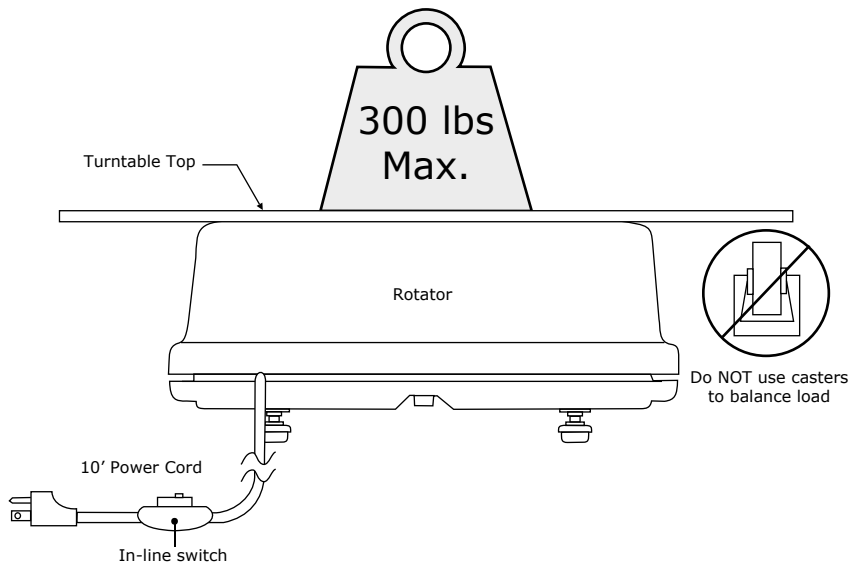

- Maximum compressive weight = 300 lbs.
- Maximum recommended display size = 4' x 4'
- Rotator must be placed on a flat and level surface.
- Larger diameter turntable top may be attached to rotator turntable.
- Weight MUST be balanced (add a counter weight if needed).
- Do NOT use caster wheels to support turntable.

WARNING! Do NOT hang weight from unit.
Hanging Weight will cause unit to come apart and fall.

Maintenance:

No regular maintenance is required for this unit.





Phone: 800-657-2650
Email: info@dynapacrotating.com
www.dynapacrotating.com


Model IR-300

Electrical Connections

Questions? Call 800-657-2650 for help


⚠ WARNING	
	Disconnect power before servicing or installing. Do not touch any electrical components while unit is connected to power source.
	Keep hands clear while operating. Read installation and maintenance instructions prior to operation.

Unit with rotating wires:

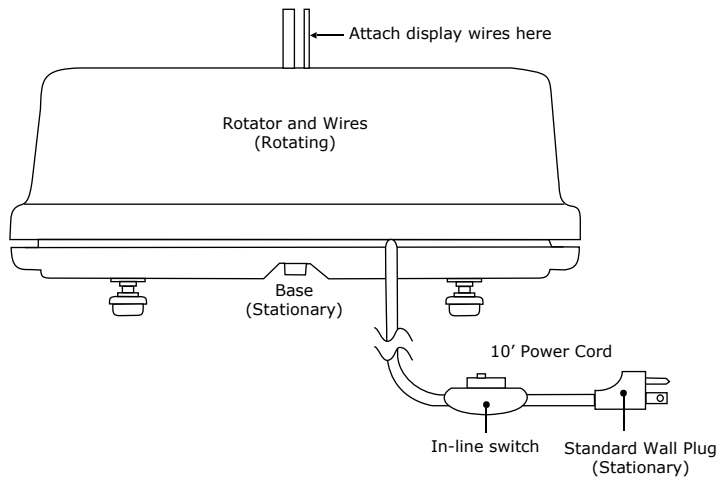

- **WARNING!** Electrical connections are live when unit is plugged in.
- Do NOT exceed rated capacity of unit (see label on unit).
- Attach display wires to rotating turntable wires.
- Plug unit into wall.
- Turn on in-line switch to start unit.
- Motor power draw = 0.1 A (12 watts)

Unit without rotating wires:

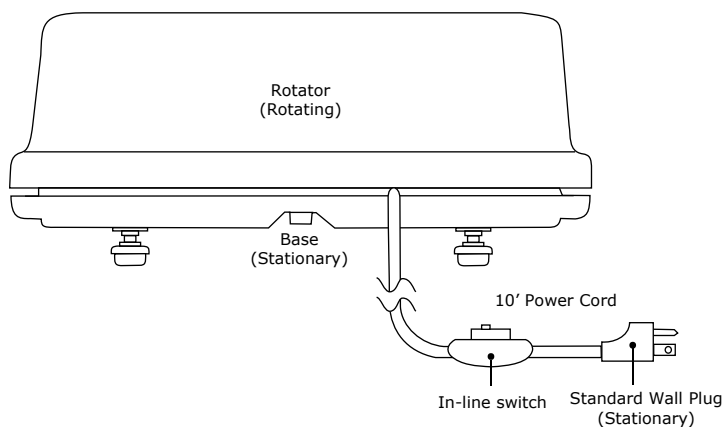

- No rotating electrical wires are available.
- Plug unit into wall.
- Turn on in-line switch to start unit.
- Motor power draw = 0.1 A (12 watts)



Phone: 800-657-2650
Email: info@dynapacrotating.com
www.dynapacrotating.com